



# Nook HD+ Speaker Replacement

A speaker replacement guide for the Nook HD+.

Written By: Alex Pelicas



## INTRODUCTION

Steps to replace a broken speaker in the Nook HD+ tablet.

---

### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [64 Bit Driver Kit](#) (1)
-

## Step 1 — Take off the Top Frame



- Wedge the plastic opening piece underneath the bottom left hand corner of the front frame
- Pry open the front frame.


## Step 2 — Remove the screws

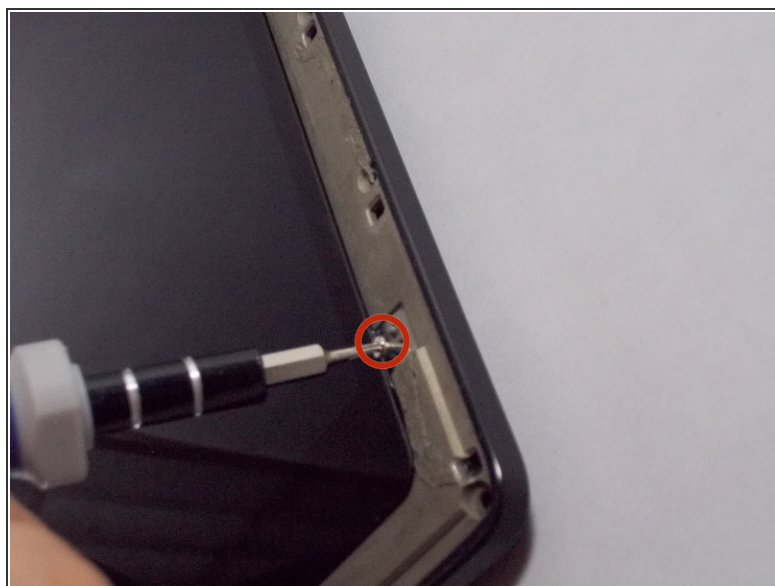

- Remove every visible screw tying the chassis to the bottom frame using a T-4 screwdriver bit.




### Step 3 — Remove the Battery

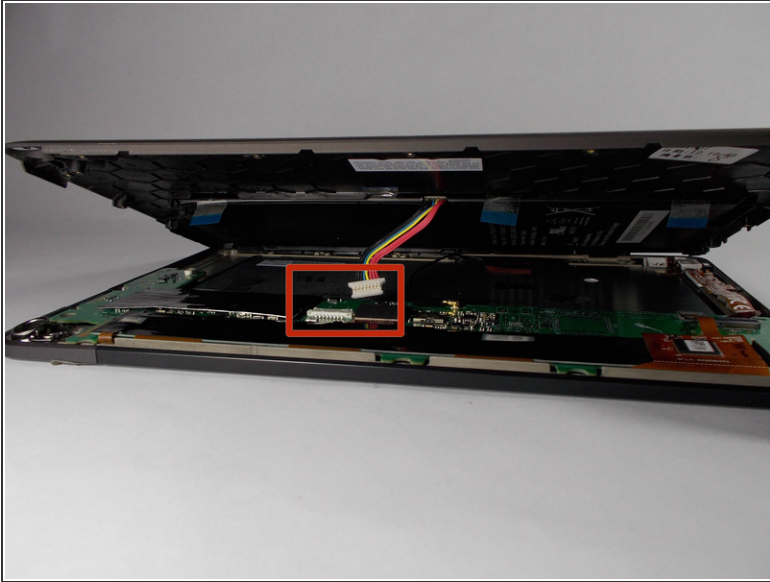

- Carefully remove the bottom frame from center chassis.
- Detach the battery ribbon from the motherboard.
- Flip the center chassis onto the screen side with the hole positioned on the bottom right hand corner.

### Step 4 — Unscrew the speaker

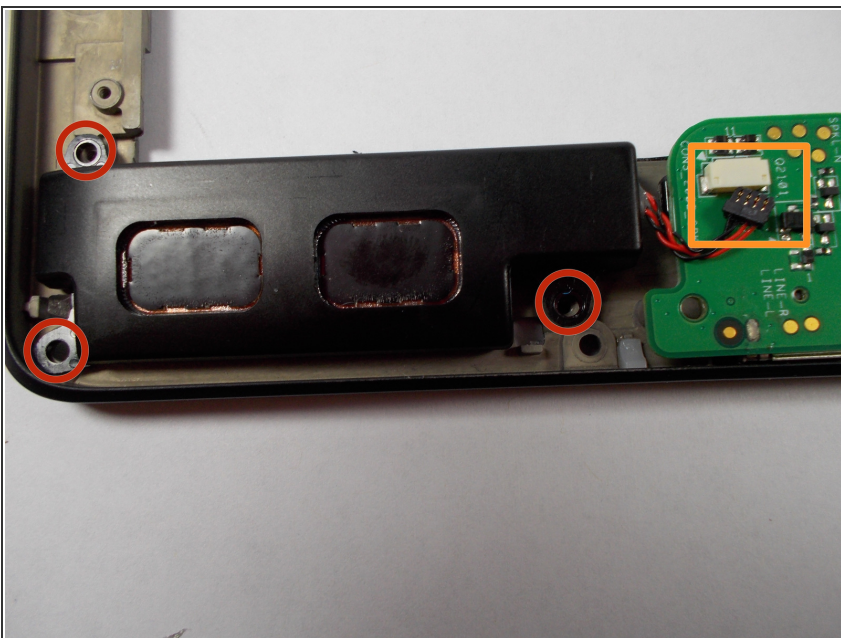

- In the bottom left hand corner remove the 3 screws that are attached to the speaker
- Disconnect the small red and black ribbon connected to the speaker from the white clip on the motherboard.
- Replace old speaker with new speaker then follow instructions in reverse order to reassemble

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-12 02:14:39 PM.